


MODEL	SENSE RANGE	THRESHOLD ADJUST	OUTPUT	LED 1	LED 2
RIBXGHF	0.5 - 150A	No/ Fixed	Wht/Blk Wires		
RIBXGHTF	0.5 - 150A	No/ Fixed	Terminals		
RIBXGHA	0.75 - 150A	Yes / Adjustable	Wht/Blk Wires	Over trip point	Under trip point
RIBXGHTA	0.75 - 150A	Yes / Adjustable	Terminals	Over trip point	Under trip point

CAUTION: RISK OF ELECTRIC SHOCK - MORE THAN ONE DISCONNECT MAY BE REQUIRED TO DEENERGIZE THE DEVICE BEFORE SERVICING.

TO SET UP

1. Start load and let stabilize.
2. Turn screw counterclockwise until LED #1 goes ON (may already be ON).
3. Turn screw clockwise until LED #2 goes ON.
4. Turn screw counterclockwise until LED #1 goes ON.
5. For differential, continue turning screw counterclockwise as per chart.

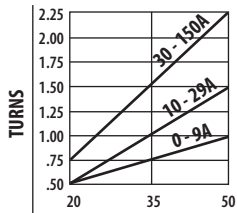

% DIFFERENTIAL




Bulletin B750

**Functional
Devices, Inc.**



RIBXGH SERIES
SPLIT CORE CURRENT SENSORS

Squeeze the locking tabs, then
pull up and back to open.

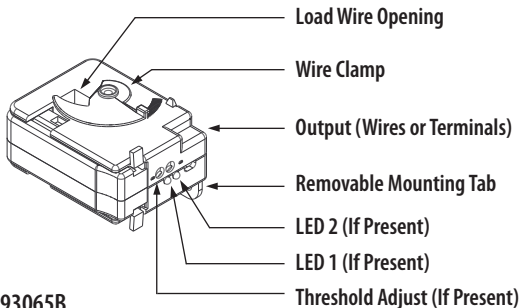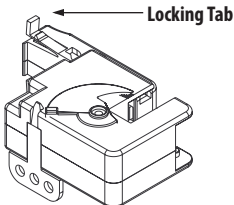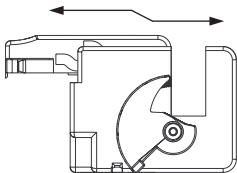

393065B

Operating Temperature:
-30 to 140° F

Max Sense Voltage:
600 Vac

Approvals:
UL Listed
UL864, UL916, C-UL Canada

Housing Rating:
Plenum, NEMA 1



Functional Devices, Inc.
310 South Union Street
Russiaville, IN 46979

www.functionaldevices.com

Bulletin B750