


H120/H120NC

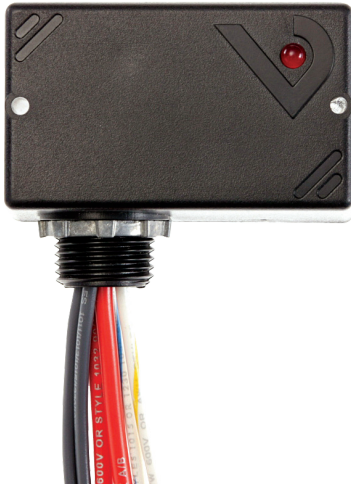

H120/H120NC

SPST Field Mount Status Relay

Installer's Specifications

Sensor Power	Induced from relay coil power
Operating Temperature	-15° to 60°C (5° to 140°F) (13.8A max.), -15° to 50°C (5° to 122°F) (20A max.)
Operating Humidity	10-90% RH, non-condensing
Expected Relay Life (mechanical)	10 million cycles
Relay Status	LED ON=energized
Wire Specifications:	
Lead Length	14"(356mm) min.
Gauge	UL1015; Coil: 18AWG; Contacts: 12AWG; Status: 16AWG
Agency Approvals	UL 508 enclosed device listing



Do not use LED status indicators as evidence of applied voltage.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Follow safe electrical work practices. See NFPA 70E in the USA, or applicable local codes.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Read, understand and follow the instructions before installing this product.
- Turn off all power supplying equipment before working on or inside the equipment.
- Use a properly rated voltage sensing device to confirm power is off.
DO NOT DEPEND ON THIS PRODUCT FOR VOLTAGE INDICATION
- Only install this product on insulated conductors.

Failure to follow these instructions will result in death or serious injury.

NOTICE

- This product is not intended for life or safety applications.
- Do not install this product in hazardous or classified locations.
- The installer is responsible for conformance to all applicable codes.
- Mount this product inside a suitable fire and electrical enclosure.


QUICK INSTALL

Disconnect and lock out all power sources before beginning the installation.


1. Using the threaded nipple, connect the device to the desired enclosure through a knock out.
2. Secure with the conduit nut provided.
3. Connect Coil:
 - Connect the coil common lead (white with yellow stripe) to the (-) source termination point.
 - Connect the 24VAC/DC lead (white with blue stripe) to the (+) source termination point.*
4. Connect current switch: connect the grey (H120) or brown (H120NC) wires to controller digital input (polarity insensitive).
5. Connect Relay Contacts:
 - Connect the relay common wire (orange) to the switched load.
 - Connect the N.O. contact (orange) to the load power source "hot" wire.
6. Secure the enclosure and reconnect power.

* Wires that are not terminated must be isolated or insulated, i.e. wire nut.


DIMENSIONS

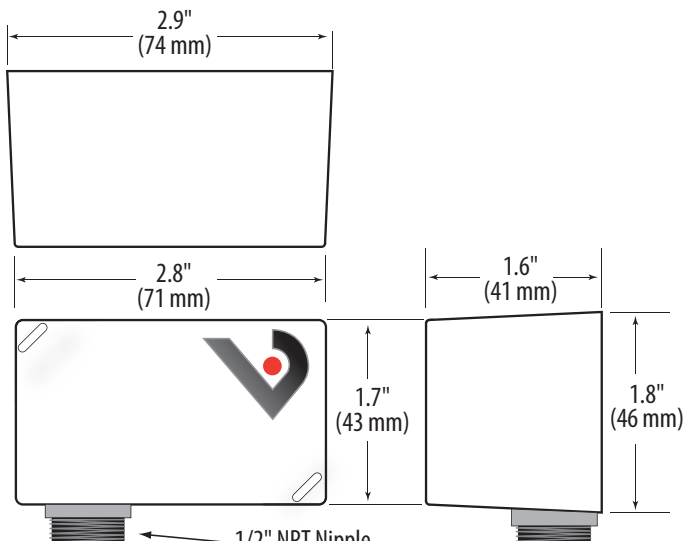

WIRING COLOR CODES

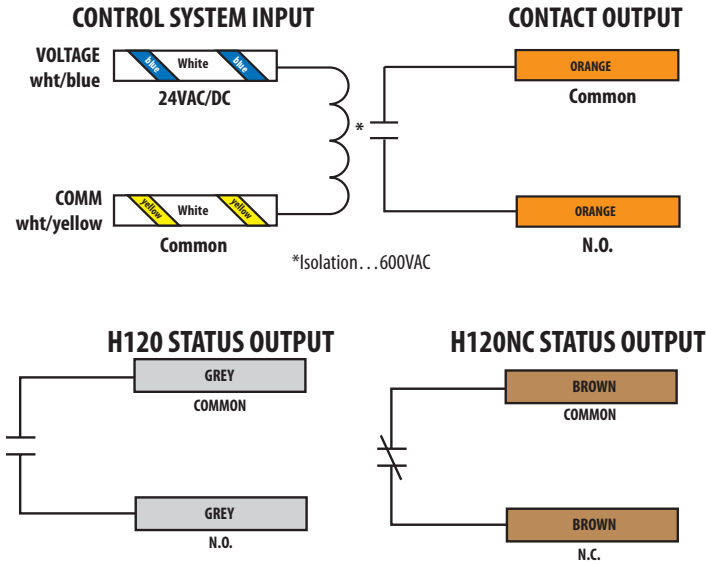

WIRING EXAMPLE

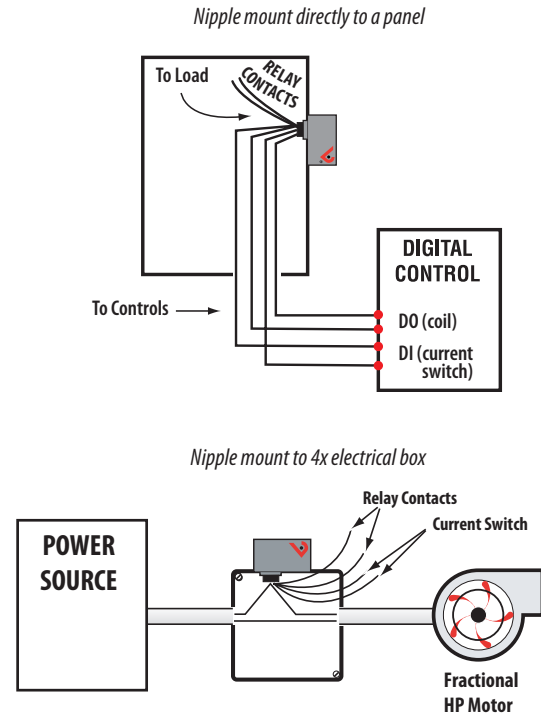

CONTACT AND COIL SPECIFICATIONS

RELAY CONTACT RATINGS (N.O.)	
Resistive.....	20A(r)*@277VAC/28VDC (250,000 Cycles)
Motor.....	120VAC, 1HP 208VAC, 1HP 250VAC, 2HP 277VAC, 2HP
Ballast.....	277VAC, 20A
Tungsten.....	120VAC, 10A
TYPICAL COIL PERFORMANCE	
Voltage	Coil Current
	AC DC
24V.....	75mA 32mA

*See operating temperature specification